



BLANK FIRE LASER MAINTENANCE KITS

(for use with StressVest® Ir Blank Fire Lasers)

 
 
STRESSVEST® PISTOL LASER INSERTS (Precision & CQT)

StressVest Blank Fire Pistol Laser Maintenance Kit

Item #: SV-BFPLI-LMK

Includes:

- 10 - Batteries 377
- 2 - L-Wrench 0.050 (Used to adjust sight screws - for lasers purchased after 2017)
- 2 - Screwdriver 0.050 (Used to adjust sight screws - for lasers purchased after 2017)
- 2 - L-Wrench 0.035 (Used to adjust sight screws - for lasers prior to 2017)
- 1 - Vibra Tite VC-3 Thread Locker (For securing Battery End Cap)
- 1 - Teflon Tape (For securing laser insert into conversion kits)

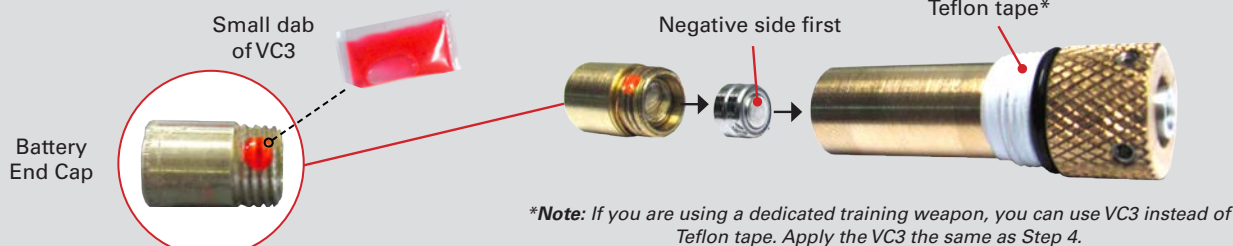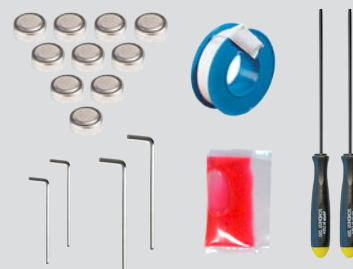


STRESSVEST® BARREL MOUNT & FLASH SUPPRESSOR MOUNT LASERS (Precision & CQT)

StressVest Blank Fire Long Gun Mount Laser Maintenance Kit

Item #: SV-LGBML-LMK

Includes:

 - 10 - Batteries 377
- 2 - L-Wrench 0.050 (Used to adjust sight screws - for lasers purchased after 2017)
- 2 - Screwdriver 0.050 (Used to adjust sight screws - for lasers purchased after 2017)
- 2 - L-Wrench 0.035 (Used to adjust sight screws - for lasers prior to 2017)
- 2 - L-Wrench 7/64 (Used to remove barrel mount laser from long gun)
- 1 - Vibra Tite VC-3 Thread Locker (For securing Battery End Cap)

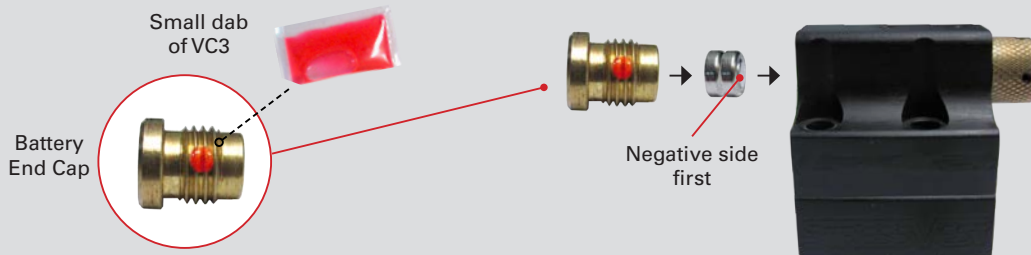

Battery Replacement Instructions

1. Using a dime (or flat blade screwdriver) unscrew Battery End Cap.
2. Remove old batteries and discard.
3. Insert two new #377 batteries, negative side first. Test laser with a StressVest prior to Step 4 to ensure batteries are installed correctly.
4. Put a **small** dab of Vibra Tite VC-3 on the threads of Battery End Cap to prevent loosening over time. *Note: DO NOT over apply. See diagram below for reference on amount.*
5. Thread Battery End Cap back on and tighten with a dime (or flat blade screwdriver) until snug.



1080 Kingsbury Avenue
Winnipeg, Manitoba, Canada R2P 1W5
Ph: (204) 336-0011 Fax: (204) 586-2049

**Reality Based Training
Just Got Real**