



HAND HELD LASER ACTIVATOR

SV-HHLA

Operating Manual

OVERVIEW

- Instructor initiated point and push activation
- Allows Instructor to immediately activate a specific StressVest®



*Hand Held Laser Activator
SV-HHLA*

 
HOW TO USE

1. Turn on the power switch on the Hand Held Laser Activator.
2. You should see the visible red laser activate.
3. Point the visible red laser to any StressVest®
4. Press the red push button to activate the ir laser that will register a hit to the StressVest®.



REPLACING THE BATTERY

1. Using a Philips screwdriver, unscrew the four screws on the back of the Hand Held Laser Activator and remove the back cover.
2. Remove the old battery and discard.
3. Insert two new AAA batteries.
4. Place the cover back on and secure with the four screws.



THIS PRODUCT COMPLIES WITH
US FDA CDRH 21CFR
SUBCHAPTER J PARTS 1040.10
AND 1040.11



Caution – Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.



1080 Kingsbury Avenue
Winnipeg, Manitoba, Canada R2P 1W5
Ph: (204) 336-0011 Fax: (204) 586-2049

**Reality Based Training
Just Got Real**