

STRESSVEST® SUICIDE VEST


Quick Setup Guide

Assembling/Setting Up the StressVest® Suicide Vest

1. Insert the two speakers into the speaker pouches on the Suicide Vest. Slide the pipe bomb props in the pipe bomb straps. The pipe bomb props can be disassembled and re-assembled by unscrewing the end caps to easily secure into the straps. Add the prop wires for extra realism and secure them with the straps.



2. Connect the two auxiliary connectors found on the StressVest® Suicide Vest Flashbox to each speaker unit.

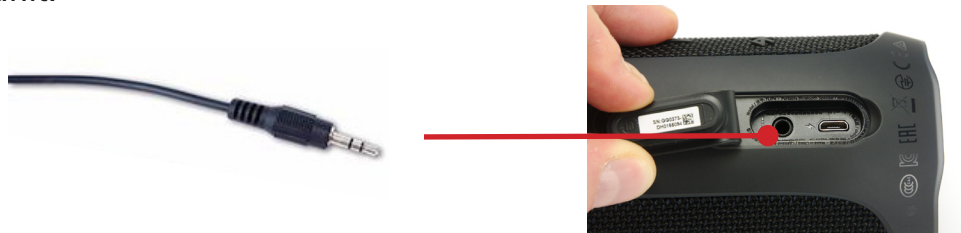


3. Place the StressVest® Face Sensor connector (input) to the Suicide Vest's shoulder strap using Velcro.



4. The StressVest® Suicide Vest is now assembled and ready to put on the Role Player. Adjust the body strap to fit on the Role Player's body.

5. To integrate StressVest® Face Sensor (sold separately), connect the green connector to the StressVest® Suicide Vest Flashbox's Face Sensor connector (input).

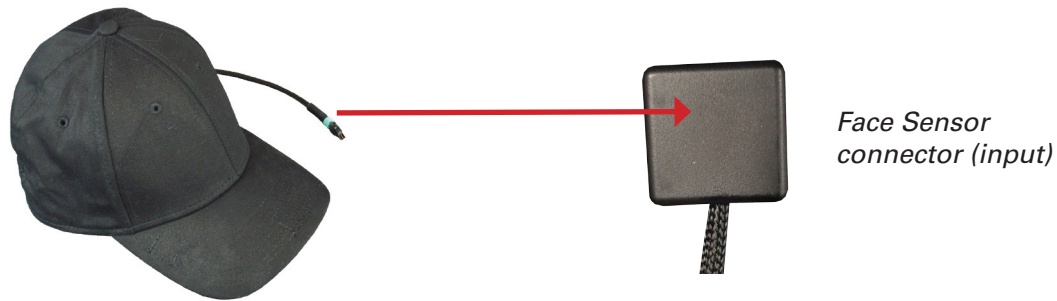

How to Use the StressVest® Suicide Vest

1. Power on the StressVest® Suicide Vest Flashbox and the two speaker units by pressing and holding the power button for a few seconds until the status light is illuminated. The StressVest® Suicide Vest is ready to be activated. To turn off, press and hold the power button on the flashbox and speakers until the status light is off.



2. Activate the StressVest® Suicide Vest by pressing the Push Button Activator. The StressVest® Suicide Vest will produce a realistic audible pipe bomb sound with a bright light flash for auditory and visual effects.



WARNING: Do not activate and flash the LED lights near the eyes. It may hurt the eyes.

3. During the activation, the StressVest® Suicide Vest will register a hit to any StressVest® within its set "kill radius" range of 0-100ft (RF MODE). For some closed room, close quarter scenarios, the FLASH MODE produces a short invisible IR light flash to activate StressVests® panels within line of sight to a range of approximately 15 feet.



IR Flash
or
RF Signal




Pain penalty or vibration

4. When a StressVest® Face Sensor is connected to the StressVest® Suicide Vest, the StressVest® Suicide Vest power/battery status light will turn blue for 10 seconds once the Role's Player's Face Sensor is hit with an IR laser. The Push Button Activator will not activate the Suicide Vest while the status light is blue.



Settings

1. Select a mode from RF (Radio Frequency), Flash (IR LED) or both by pressing the MODE button. The status light indicates what mode you are on.

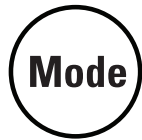

FLASH



RF

2. Adjust the speakers volume by pressing the VOLUME button. *Note: You may also adjust the volume using the speaker's volume buttons. For your convenience, always have the volume setting on the speaker unit itself maxed out.*



3. When RF and BOTH modes are selected, you can adjust the range ("kill radius") from 0-100 feet. Press the RF Range button to toggle between the five levels of range. Level 1 - 0ft to level 5 - 100ft.



Charging Batteries

STRESSVEST® SUICIDE VEST FLASHBOX

When StressVest® Suicide Vest battery is running low, the battery/power light indicator will turn red. Charge the StressVest® Suicide Vest using a mini USB Charger. The battery/power light indicator will turn green when fully charged.



SPEAKERS

The two speakers on the StressVest® Suicide Vest need to be charged separately. Use orange micro USB cable to charge the speakers. The power light button on the speakers will turn blue when fully charged.

